
## **Installation Manual**

## Voltage:220~240VAC 50Hz/60Hz

Please kindly read before instruction of correct installation and matters need to have attention

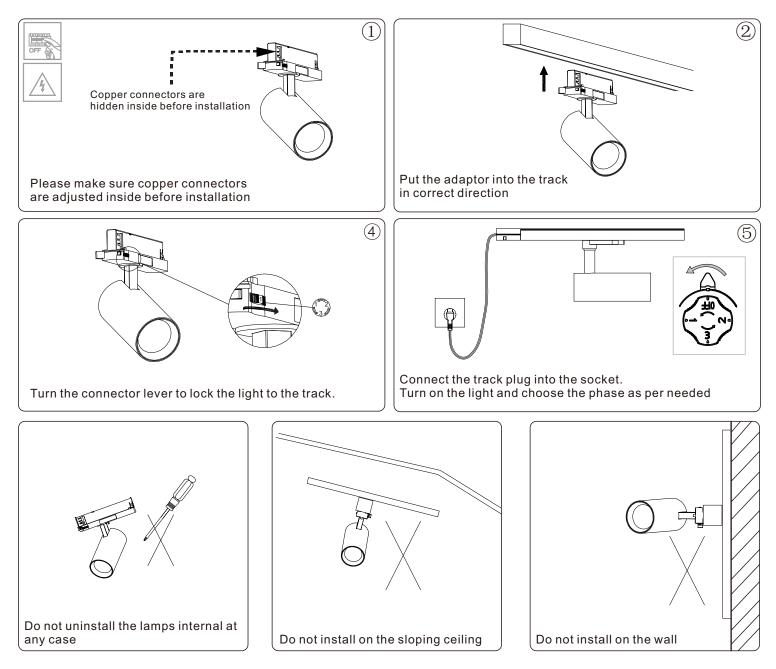

## Attentions:

- 1: This product apply to indoor only, not suitable for outdoor and over-heated temperature enviorment, otherwise will casue damage, fire
- 2: Please do turn off the power before installation, also turn off during maintenance and cleaning.
- 3:Do make sure the product is installed away from near objects at least 100mm
- 4:Do not cover the product with thermal insulation material at any case
- 5:Do not uninstall the lamp internal at any case
- 6:Do not install the lamp on the sloping ceiling or on the wall
- 7: Turn off the power when the light works not well.