

RF2.4G RGB LED SPI Controller Set

Model No.: SC + R9 / Code: AV0106SKY-E

SC control LED lights with the following 32 kind compatible ICs: TM1803, TM1804, TM1809, TM1812, UCS1903, UCS1909, UCS1912, UCS2903, UCS2909, UCS2912, WS2811, WS2812, TM1829, TLS3001, TLS3002, GW6205, MBI6120, TM1814B, SK6812, UCS8904B, LPD6803, LPD1101, D705, UCS6909, UCS6912, LPD8803, LPD8806, WS2801, WS2803, P9813, SK9822, TM1914A.

By RF remote controls you can select from a variety of dynamic lighting effects, adjust changing speed and brightness, set control pixels quantity, adjust RGB sequence, select IC type etc. you can also customize two kinds of scene modes to bring you fantastic color.

Feature

- Mini-style RF2.4G multi-pixel RGB controller with SPI signal output.
- Output SPI signal to control a variety of digital LED lights with the compatible ICs listed above. IC type and R/G/B order can be set through the Remote.
- Adopt 2.4GHz wireless technology, remote distance up to 30m.
- Built in 32 dynamic mode, include horse-race, chase, flow, trail, gradual change style.

Technical parameter


LED Remote

- Output signal: RF(2.4GHz)
- Working voltage: 3VDC(CR2032)
- Standby time: 2 years
- Remotedistance: 30m
- Size: L107×W58.5×H9mm

LED Receiver

- Input voltage: 5-24VDC
- Output signal: SPI(DATA/CLK)
- Output dots: 1024 Max
- Size: L97×W33×H18mm


Dimension

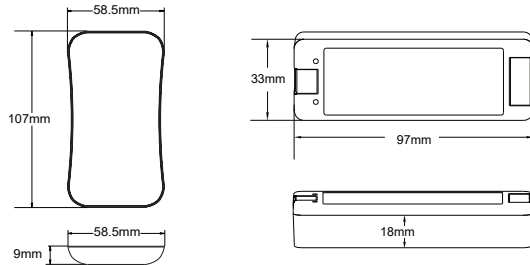


Match guide

1. Match: Short press match key of the receiver, within 5s, press on/off key of the remote.
2. Delete: Long press match key of the receiver for 5s, delete all matched remote.

Interface instruction

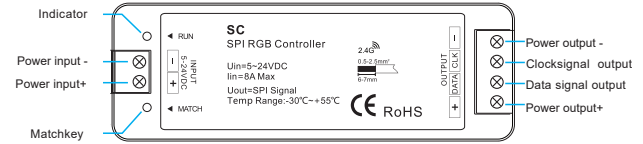


Remote function

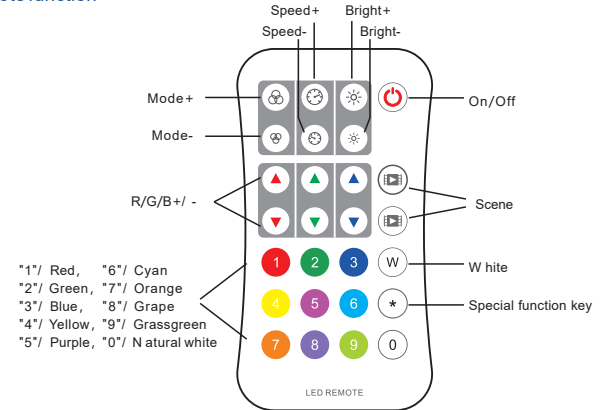


- Mode+/-: Short press dynamic mode built in controller, long press 2s Mode+ run mode cycle, long press 2s Mode- run the first mode. The remote is default 10 dynamic mode, when match with SPI controller which have 32 dynamic mode, please long press 2s Mode+ key firstly.
- Speed+/-: Adjust dynamic mode speed, short press 10 levels, long press 2s get the fastest/ slowest speed.
- Bright+/-: Adjust brightness, short press 10 levels, long press 1-5s for continuous 256 levels adjustment.
- R/G/B+/-: Adjust R/G/B brightness respectively, short press 10 levels, long press 1-5s for continuous 256 levels adjustment.
- W hite: Adjust white color, short press turn on/ off white (RGBmix), long press 1-5s for continuous 256 levels saturation adjustment.
- Scene: Two scene memory, short press recall the scene, long press 2s save current color into the scene.

Wiring diagram

SC connect with SPIspot light(TM1803)

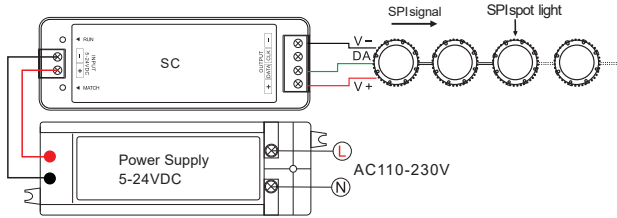

SC connect with SPIpixel strip(LPD6803)

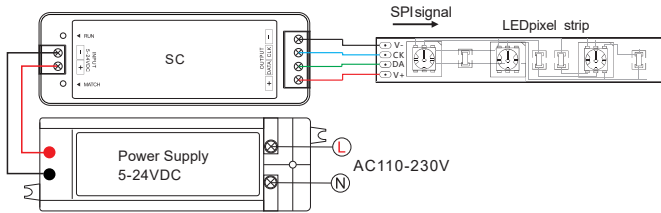

RGB change mode list

No.	Name	No.	Name	No.	Name
1	Red horse race white ground	12	Blue W hite chase	23	Purple float
2	Green horse race white ground	13	Green Cyan chase	24	RGBW float
3	Blue horse race white ground	14	RGB chase	25	Red Yellow float
4	Yellow horse race blue ground	15	7 color chase	26	Green Cyan float
5	Cyan horse race blue ground	16	Blue meteor	27	Blue Purple float
6	Purple horse race blue ground	17	Purple meteor	28	Blue W hite float
7	7 color multi horse race	18	W hite meteor	29	6 color float
8	7 color horse race close + open	19	7 color meteor	30	6 color smoothsectionally
9	7 color multi horse race close + open	20	Red float	31	7 color jump sectionally
10	7 color scan close + open	21	Green float	32	7 colorstrobe sectionally
11	7 color multi-scan close + open	22	Blue float		

Compatible IC type

SC+R9 RF2.4G RGB LEDSPI Controller Set

No.	IC type	Output signal
1	TM1803	DATA
2	TM1809, TM1804, TM1812, UCS1903, UCS1909, UCS1912, UCS2903, UCS2909, UCS2912, W S2811, W S2812	DATA
3	TM1829	DATA
4	TLS3001, TLS3002	DATA
5	GW6205	DATA
6	MBI6120	DATA
7	TM1814B(RGBW)	DATA
8	SK6812(RGBW)	DATA
9	UCS8904B(RGBW)	DATA
10	LPD6803, LPD1101, D705, UCS6909, UCS6912	DATA, CLK
11	LPD8803, LPD8806	DATA, CLK
12	WS2801, WS2803	DATA, CLK
13	P9813	DATA, CLK
14	SK9822	DATA, CLK
15	TM1914A	DATA

Use remote set SPI digital LEDstrip

- Set LEDstrip length [Pixel number(8~1024)]. * + 3 number + * for example:
 032, set pixel number to 32.
 600, set pixel number to 600.
 1024, set pixel number to 1024.
- Set LEDstrip chip type. * + 2 number + *
 11: TM1803
 12: TM1809, TM1804, TM1812, UCS1903, UCS1909, UCS1912, UCS2903, UCS2909, UCS2912, WS2811, WS2812
 13: TM1829
 14: TLS3001, TLS3002
 15: GW6205
 16: MBI6120
 17: TM1814B(RGBW)
 18: SK6812(RGBW)
 19: UCS8904B(RGBW)
 21: LPD6803, LPD1101, D705, UCS6909, UCS6912
 22: LPD8803, LPD8806
 23: WS2801, WS2803
 24: P9813
 25: SK9822
 31: TM1914A
- Set LEDstrip RGB order. * + 1 number + *
 1: RGB, *2*: RBG, *3*: GRB, *4*: GBR, *5*: BRG, *6*: BGR.

Safety information

- The product shall be installed and serviced by a qualified person.
- This product is non-waterproof. Please avoid the sun and rain.
- Good heat dissipation will prolong the working life of the controller, please ensure good ventilation.
- Please check if the output voltage of any power supplies used comply with the working voltage of the product.
- Ensure all wire connections and polarities are correct and secure before applying power to avoid any damage to the LED lights.
- If a fault occurs, please return the product to your supplier. Do not attempt to fix this product by yourself.